PRESSURE DISTRIBUTION COMPONENT MANUAL FOR PRIVATE ONSITE WASTEWATER TREATMENT SYSTEMS

(VERSION 2.0) January 30, 2001

State of Wisconsin Department of Commerce Division of Safety and Buildings

TABLE OF CONTENTS

		Page
I.	Introduction and Specifications	3
II.	Definitions	4 <u>5</u>
III.	Description and Principle of Operation	5 <u>6</u>
IV.	Design	<u>7</u> 6
V.	Site Preparation and Construction	9 <u>10</u>
VI.	Operation, Maintenance and Performance Monitoring	9 <u>10</u>
VII.	Graphs 1 through 6	11 12
VIII.	Tables 4 through 7	17 <u>20</u>
IX.	References	20 <u>23</u>
X.	Pressure Distribution Worksheet	21 <u>24</u>
XI.	Plan Submittal and Installation Inspection	24 <u>27</u>

Published on June 11, 1999 by
Dept. of Commerce
Division of Safety and Buildings
Safety and Buildings Publication SBD-10573-P (R.6/99)10706-P (N.01/01)

ADA Statement

The Department of Commerce is an equal opportunity service provider and employer. If you need assistance to access services or need material in an alternate format, please contact the Department at (608) 266-3151 or TTY (608) 264-8777.

I. INTRODUCTION AND SPECIFICATIONS

This Private Onsite Wastewater Treatment System (POWTS) component manual provides design, construction, inspection, operation, and maintenance specifications for a pressure distribution component. However, these items must accompany a properly prepared and reviewed plan acceptable to the governing unit to help provide a system that can be installed and function properly. Violations of this manual constitute a violation of chs. Comm 83 and 84, Wis. Adm. Code. The design provides equal distribution of effluent from a dose tank into a distribution cell of a soil treatment or dispersal component. To ensure that equal distribution is achieved, specifications in Tables 1, 2, and 3 must be met.

Note: Detailed plans and specifications must be developed and submitted for review and approval by the governing unit having authority over the plan for the installation. Also, a Sanitary Permit must be obtained from the department or governmental unit having jurisdiction. See Section XI for more details.

Table 1 FLOWS AND LOADS					
Design Wastewater Flow (DWF)	<u>≤ 5000 gal/day</u>				
Number of effluent doses	Must conform to the requirements of the receiving component design .				
Wastewater particle size	≤ 1/8 inch diameter				
Dose volume Volume of a single dose to a	\geq 5 times the void volume of the distribution lateral(s)				
distribution cell	and ≤ 20% of the Design Wastewater Flow				
Head pressure at distal end of lateral(s)	≥ 2.5 ft. for 1/4" and 3/16" inch orifices, ≥ 3.5 ft. for				
	5/32 inch orifices, and ≥ 5 ft. for(1/8" orifices)				
Network pressure compensation for fittings	= Distal head pressure x 30 percent				
Flow velocity in force main and manifold	$\geq 2 \text{ ft/sec } \underline{\text{and}} \leq 10 \underline{\text{ ft/sec}}$				
Size of distribution cell	≤ 5000 square feet				

Table 2 SIZE AND ORIENTATION						
Diameter of force main	≤ 6 inch					
Diameter of force main	≥ 1-1/2 inch					
Diameter of manifold	$\geq 1-1/4$ inch, but not $> 3 \leq 6$ inch					
Diameter of manifold	≥ 1 inch					
Diameter of lateral	$\geq \frac{34}{4}$ inch, but not $\geq \leq 3$ inch					
Diameter of lateral	≥ 3/4 inch					
Diameter of discharge orifice	$= 1/8, 5/32, 3/16 \text{ or } \le 1/4 \text{ inch}$					
Diameter of discharge orifice	≥ 1/8 inch					
Distribution cell area per orifice	≤ 6 ft ² for systems with below ground infiltrative					
	surfaces and mound components					
Distance between laterals	≤ 4feet within same cell					
Distance from lateral to edge of distribution cell	$\leq 1/2$ distance between laterals, but not $> \frac{1.5}{2}$					
	feet					
Distance from lateral to edge of distribution cell	$\leq \frac{1}{2}$ the distance between laterals, but not > 2 feet					
Distance from discharge orifice to <u>edge end</u> of	\geq 6 inches, but not $>$ 2 feet					

distribution cell	

Table 2 SIZE AND ORIENTATION (continued)						
Elevation of laterals	Level or ≤ 1 inch slope back to manifold					
Location of orifices for laterals in stone aggregate	Bottom of lateral if orifice shields are not provided or top of lateral if orifice shields are provided					
Location of orifices for laterals not in stone aggregate	Bottom or top of lateral, if orifice shields are provided or others means are provided to prevent soil erosion on the infiltrative surface or top of lateral, if orifice shields are provided					

Table 3						
OTHER SPECIFICATIONS						
Spacing between pipe supports for horizontal pipe	Meets requirements of s. Comm 82.60, Wis. Adm. Code					
Material specifications	Meet requirements of s. Comm 84.30, Wis. Admin. Code					
Joint specifications	Meets requirements of s. Comm 84.40, Wis. Admin. Code					
Connection to manifold or laterals	By use of tee <u>patterned fitting</u> or 90° elbow					
Turn ups	Provide a means of flushing out all laterals in accordance with					
	section V of this manual. Turn ups are installed in a protective enclosure					
Pump	Rated by pump manufacture as an effluent or sewage pump					
Siphon	Rated by siphon manufacture as an effluent or sewage siphon					
Septic tank effluent pump system	Meets requirements of s. Comm 84.10, Wis. Adm. Code and the					
Separe tains officient pump system	component manual					
Dose tank or compartment volume	≥ Volume of a single dose + reserve capacity ^a + drain back					
employing one pump	volume ^b + (6 inches x average gal/inch of tank) ^c					
Dose tank or compartment volume	Notes: a: Reserve capacity ≥ the estimated daily flow. b: Drain back volume ≥ Volume of wastewater that will drain into the dose tank from the distribution cell. c: Four inches of this dimension ≥ vertical distance from pump intake to bottom of tank. Two inches of this dimension ≥ vertical distance between pump on elevation and high water alarm activation elevation. Meets requirements of chs. Comm 83 and 84, Wis. Admin. Code ≥ Volume of a single dose + drain back volume a + (6 inches x					
employing duplex pumps	average gal/inch of tank) ^b					
	Notes: a: Drain back volume ≥ Volume of wastewater that will drain into the dose tank from the force main. b: Four inches of this dimension ≥ vertical distance from pump intake to bottom of tank. Two inches of this dimension ≥ vertical distance between pump on elevation and high water alarm activation elevation.					

Siphon tank or compartment	≥ What is required to accommodate volumes necessary to
volume	provide dosing as specified in this manual
Pump controls	Meet requirements of chs. Comm 83 and 84, Wis. Admin., Code
Electrical equipment and wiring	Meet requirements of ch. Comm 16 and 83, Wis. Admin. Code
Access to pump	Means of removing pump while maintaining compliance with
	confined space entry requirements by not entering dose tank-must
	be provided
Alarm or warning system	Meets requirements of ch. Comm 83, Wis. Admin. Code
Duplex pumps	Meet requirements of ch. Comm 83, Wis. Admin. Code
Installation inspection	In accordance with ch. Comm 83, Wis. Adm. Code
Management	Meets requirements of ch. Comm 83, Wis. Admin. Code and this
	manual

II. DEFINITIONS

Definitions unique to this manual are included in this section. Other definitions that may apply to this manual are located in ch. Comm 81 of the Wis. Adm. Code or the terms use the standard dictionary definition.

- A. "Distribution line" means the total length of two laterals that are connected to a manifold at a common point.
- B. "Distribution network" means the piping of the pressurized system that include manifold(s) and later(s).

₿.

- B.C. "Drain back" means the amount of treated effluent that will drain <u>from the force main</u> to the dose tank after a single dosing event.
- C.D. "Force main" means the piping from the pump or siphon to the manifold or to the lateral tee or coupling connecting laterals to the force main.
- D.E. "Lateral" means the length of perforated pipe starting at the point of effluent entry to the distal end orifice.
- E.F. "Manifold" means the piping between the force main and the laterals.
- G. "Network pressure comensation" means the pressure loss due to fittings in the pressure distribution network.

F.

- F.H. "Orifice shield" means a device that dissipates the energy of the orifice discharge and or protects the orifice from blockage due to aggregate.
- I. "Septic tank effluent pump system" means a septic tank which has a pump installed in the tank that will pump effluent from the clear zone.
- J. "Turn ups" means a means of providing a full size opening in the downstream end of laterals to allow for flushing of the system.

III. DESCRIPTION AND PRINCIPLE OF OPERATION

Pressure distribution is a method to provide a specific volume of effluent to a specific area with each dosing cycle. The design of a pressure distribution component on one elevation is such that the volume of water passing out each hole in the network is approximately equal. This is achieved by designing for 75 to 85 percent of the total head loss in the network to be lost when liquid passes through the distribution hole and only 10 to 15 percent of the total head loss to occur in the delivery piping.

The component consists of <u>a dosing chambers</u> (containing a pump or siphon with appropriate controls) and a dosing chamber containing a pump or siphon that discharges effluent into a network of small diameter perforated pipes designed to discharge equal amounts of effluent from each orifice

In a pressure distribution component using a pump, partially or fully treated wastewater enters a dose chamber through the inlet. As liquid begins to fill the dose chamber, it raises the "off" float. When the liquid level in the tank is lifted to the "pump on" level, the-"on" float activates the pump and the predetermined dose is pumped from the pump chamber through the force main to the distribution network. The "on" and "off" float may be one float. laterals.

In a pressure distribution component using a siphon, partially or fully treated wastewater enters a dose chamber through the inlet When the liquid level reaches a pre-determined depth in the dose chamber, the siphon discharges the liquid through a forcemain to the distribution laterals. Although the siphon functions without any moving parts, it does require monitoring. Studies have shown that the siphon may begin to "trickle" when the bell loses it's air charge due to an air leak around the snifter tube, for no apparent reason, and if this problem is not corrected, the holes and laterals may foul or it reverts to gravity discharge.

The laterals are designed to fill quickly to provide equalization throughout the system. Air is pushed ahead of the liquid through the force main, manifold (if a manifold is required), laterals, and discharged through the drilled holes, entering the distribution cell.

A properly designed and installed pressure distribution component uniformly distributes effluent over the entire distribution cell. This <u>strives to</u> prevents the soil from becoming over loaded in one area. <u>while not receiving effluent in another area.</u> It also allows for a period of time between doses to drain the infiltrative surface to maintain unsaturated flow conditions in the soil.

The primary application of a pressure distribution component is in locations where it is desirable to:

- 1. Maintain a uniform effluent application rate throughout the distribution cell;
- 2. Treat and dispose of effluent in the uppermost levels of the soil profile;
- <u>32</u>. Aid in mitigating the potential contamination of groundwater in areas of excessively permeable soils;
- 43. Improve the performance and increase the life span of a dispersal cell; and
- <u>45</u>. Reduce the chance of breakout or seepage on slopes.

Pressure distribution components are used in at-grades, in-ground soil absorption, mounds, single pass sand filters and other components. Also pressure distribution may be appropriate for larger dispersal cell components. Finally, in certain conditions where pumping is necessary due to elevation problems, pressure distribution can be incorporated with little extra expense.

This manual specifies the design, construction, inspection, operation, and maintenance criteria for one method of providing equal distribution of wastewater in a soil treatment and/or dispersal component. The designer must also be familiar with the requirements of the component for which the pressure distribution component will be used in order to have a complete system design that will meet the Wisconsin Administrative Code.

IV. DESIGN

The following steps need to be followed to design a pressure distribution component:

- 1. Determine soil treatment and/or dispersal component layout This is based on the type of component and the design soil application rate.
- 2. Determine lateral length and spacing in accordance with the soil treatment/dispersal component design or Table 2, if not specified in the soil treatment/dispersal component design. See Figure 1.

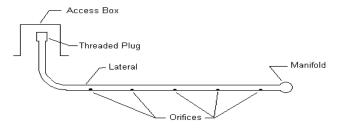


Figure 1 – Lateral Length

- 3. Determine manifold length and location.
- 4. Determine number of orifices in a lateral. How many orifices should be drilled in a lateral depends on the type of system, area allowed per orifice, and the design loading rate of the distribution cell. The number of orifices is determined by using the following equation. See figure 2.

$$n = L/x + .5$$

Where: n = number of orifices L = lateral lengthx = orifice spacing

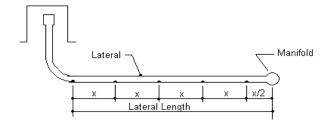


Figure 2 – Number of Orifices in a Lateral

5. Determine the number of orifices in a <u>distribution line</u>. The number of orifices is determined by using the following equation. See figure 3.

```
n = d/x + 1
Where: n = number of orifices
d = distribution line length
x = orifice spacing
```

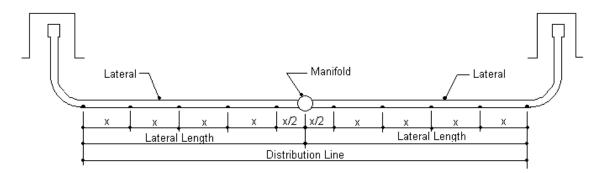


Figure 3 – Number of Orifices in a Distribution Line

- 6. Select orifice size of 1/8, <u>5/16</u>, 3/16, or 1/4 inch.
- 7. Determine lateral diameter Using Graphs 1 through 68.
- 8. Select distal pressure A design option based on site specific elevations and effluent delivery preferences and requirement of Tables 1 through 3.
- 9. Calculate lateral discharge rate using Table 4. (orifice discharge rate at selected distal pressure multiplied by the number of holes orifices per lateral).
- 10. Determine manifold diameter Determined by using Table 5.

- 11. Calculate component discharge rate By multiplying the lateral discharge rate by the number of laterals.
- 12. Select a pipe size for the force main by using the calculated discharge rate and Table 6.
- 13. Determine the void volume of the distribution laterals by multiply the total length summation of the laterals by the volume given in Table 7 for the diameter of the laterals.

If a pump is selected follow step #14.

If a siphon is selected proceed to step # 16

14. Determine volume of dose chamber for components pressurized by a pump. (Volume of a septic tank effluent pump system is determined by department plumbing product approval.

The dose chamber <u>employing one pump</u> shall contain sufficient volume to dose the distribution cell as required by its system design, retain drain back volume, contain a one day reserve zone, <u>provide minimum 2 inch separation between alarm activiation and pump-on activation</u>, and allow for protection of the pump from solids.

A reserve capacity is required on a system with only one pump. Other reserve capacities may also be required by the manual for the component type the dose chamber serves.

The reserve volume is at least <u>equal to the estimates daily flow from a one day holding capacity</u> <u>for</u> the building. Reserve capacity may be calculated based using 100 gallons per bedroom per day for one and two family residences. Reserve capacity must also meet requirements- in the manual for -a component type, which contains the pressure distribution component.

The dose volume shall be included in the sizing of the dose chamber.

The pump alarm activation point must be at least 2 inches above the pump activation point.

Allow "dead" space below the pump intake to permit settling of solids in the pump tank. This can be accomplished by placing the pump on concrete blocks or other material that can form a pedestal.

The pump manufacturer requirements shall be followed. This may include the "pump off" switch located high enough to allow for complete immersion of the pump in the tank.

- 15. Select a pump that will provide an average flow equal to or greater than the total discharge rate of the orifices at a pressure equal to or greater than the <u>sum of the distal pressure</u>, <u>network</u> <u>pressure compensation</u>, and <u>pressure loss due to friction in the force main.</u> operational pressure, plus the friction loss of the manifold and force main. If the perforation discharge rate is greater than the pump discharge rate, tThe system head will be insufficient <u>if the perforation discharge</u> rate is greater than the pump discharge rate.
- 16. Select a siphon that will provide an average flow equal to or greater than the total discharge rate of the orifices at a pressure equal to or greater than the operational pressure plus the friction loss of the manifold and the force main. The system head for components using automatic siphons

must be developed in the force main. The difference in the elevation from the bottom of the siphon bell to the lateral must be greater than or equal to the force main friction loss plus the system head required. If the perforation discharge rate is greater than the siphon discharge rate, the system head will be insufficient.

17. Determine volume of dose chamber for components pressurized by a siphon.

The dose chamber shall contain sufficient volume to allow the siphon to dose the component as required by the soil treatment and/or dispersal component design and allow for protection of the siphon from solids.

V. SITE PREPARATION AND CONSTRUCTION

Procedures used in the construction of a pressure distribution component are just as critical as the design of the treatment and/or dispersal component. A good design with poor construction results in failure. Construction procedures for a pressure distribution component are as follows:

- 1. Review design and installation requirements for the type of treatment and/or dispersal component for which the pressurized system is to be installed.
- 2. Drill holes for the orifices at the locations required by the design. Remember it is very important to use a shaarp drill bit and to remove all burrs from the pipe and orifices in order for the system to work as designed.
- 3. Assemble the distribution network as determined by the pressure distribution component design, making sure to solvent cement all joints in the system.
- 4. Extend the end of each lateral up with the use of long turn or 45° fitting to a point within six inches of the final grade. Terminate the ends of the laterals with a valve, threaded cap or threaded plug. Provide access from final grade for the valve, threaded cap or threaded plug.
- 5. Install the pump or siphon as required by ch. 83 of the Wis. Admin. Code.


VI. OPERATION, MAINTENANCE AND PERFORMANCE MONITORING

- A. The component owner is responsible for the operation and maintenance of the component. The county, department or POWTS service contractor may make periodic inspections of the components, checking for sludge accumulation in the dose chamber, condition of electrical components, alarms, dose rate, dose volume and frequency, etc.
 - The owner or owner's agent is required to submit maintenance records routinely to the county or other appropriate jurisdiction and/or the department.
- B. Design approval and site inspections before, during, and after the construction is accomplished by the county or other appropriate jurisdictions in accordance with ch. Comm 83 of the Wis. Admin. Code.

- C. Other routine and preventative maintenance aspects are:
 - 1. Dose chambers are to be inspected routinely and maintained when necessary in accordance with their approvals.
 - 2. Inspection of the component performance is required at least every three years. Inspection includes checking the dose rate, volume and frequency.
 - 3. Partial plugging of the distribution network may be detected by extremely long dosing times. The ends of the distribution laterals should be exposed and the pump activated to flush out any solid material. The liquid that is flushed out is to be directed back into the distribution cell. The liquid may also of the laterals is to be directed back into the distribution cell or into an acceptable container and disposed of properly. If necessary, the laterals can be cleaned.
- D. User's Manual: A user's manual is to accompany the pressure distribution component. The manual is to contain the following as a minimum:
 - 1. Diagrams of all components and their location. This should include the location of the access ports for cleaning and/or flushing the component.
 - 2. Specifications for all electrical and mechanical components.
 - 3. Names and phone numbers of local health authority, component manufacturer or management entity to be contacted in the event of a failure.
 - 4. Information on the periodic maintenance of the component, including electrical/mechanical components.
 - 5. Notice that the dose chamber may fill due to flow continuing during pump malfunction or power outages. One large dose when the power comes on or when the pump is repaired may cause the dispersal system to have problems. In this situation, the pump chamber should be pumped by a licensed pumper before pump cycling begins or other measures shall be used to dose the component with only the proper amount of influent. This may include manual operation of the pump controls until such time the pump chamber has reached its normal level.
- E. Performance monitoring must be performed on pressure distribution systems installed under this manual.
 - 1. The frequency of monitoring must be:
 - a. At least once every three years following installation and,
 - b. At time of problem, complaint, or failure.
 - 2. Reports are to be submitted in accordance with ch. Comm 83, Wis. Admin. Code.


Minimum Lateral Diameters Based on Orifice Spacing for 1/8" Diameter Orifices

Graph 1

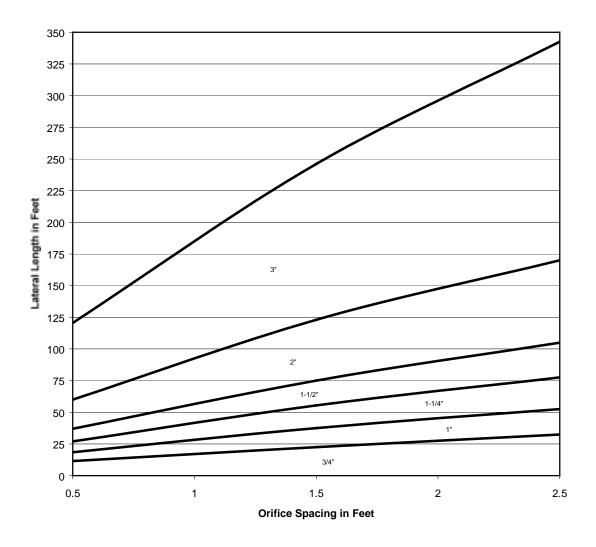


Minimum Lateral Diameters Based on Orifice Spacing for 1/8" Diameter Orifices

Graph 2

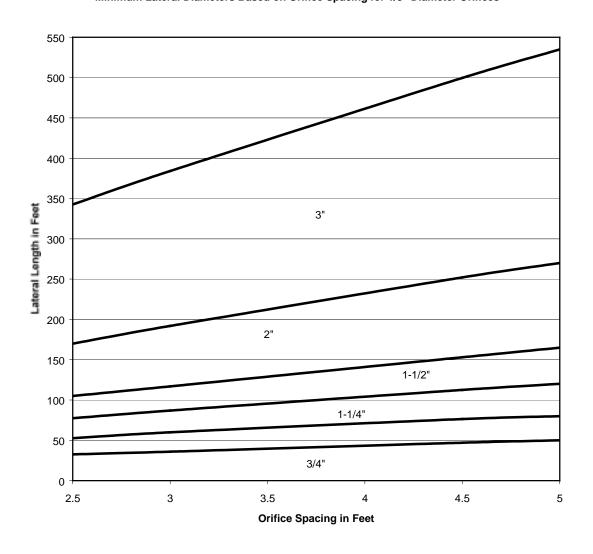


Graph 3

Minimum Lateral Diameter Based on Orifice Spacing for 5/32" Diameter Orifices

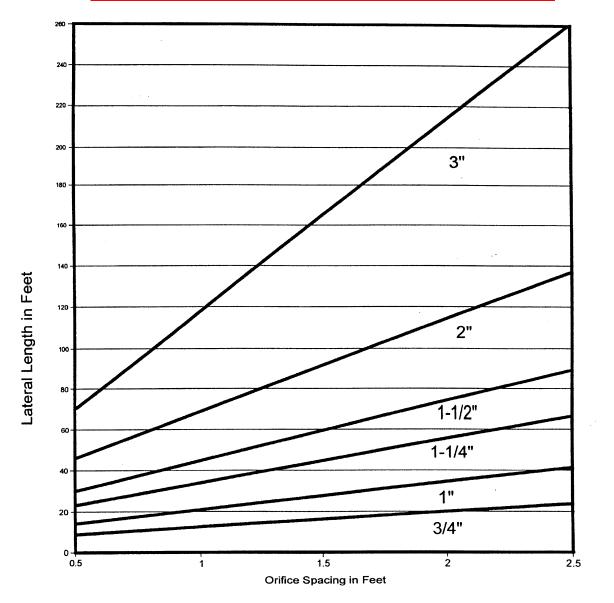


Graph 4




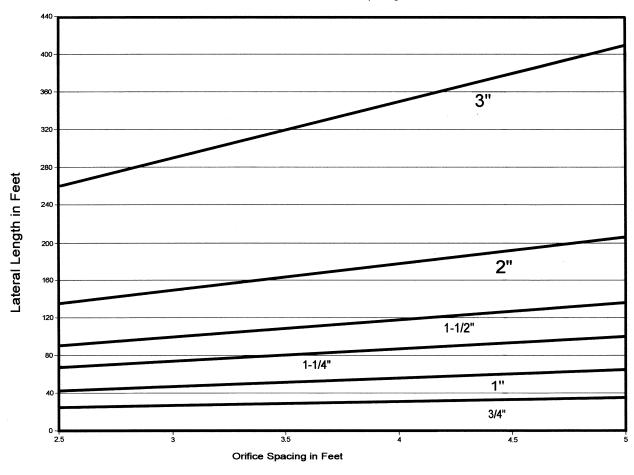


Minimum Lateral Diameter Based on Orifice Spacing for 3/16" Diameter Orifices

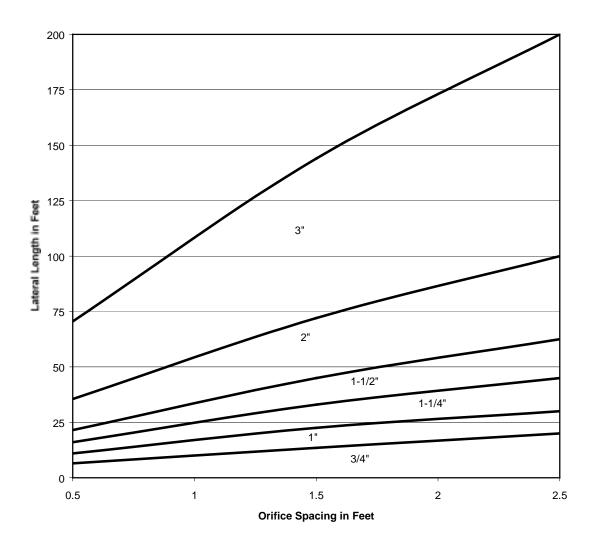


Minimum Lateral Diameter Based on Orifice Spacing for 3/16" Diameter Orifices

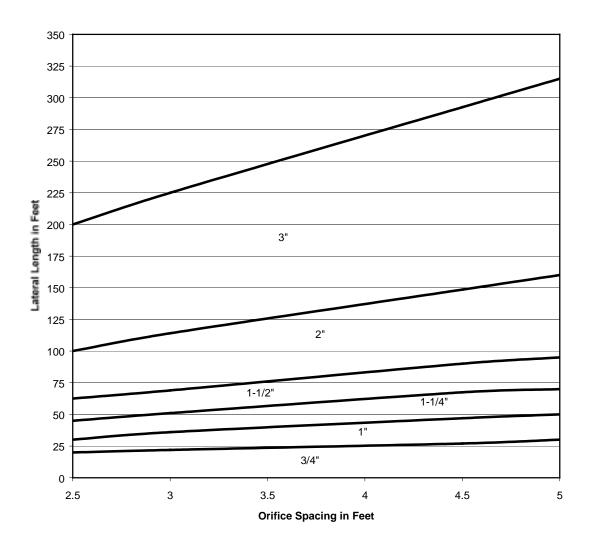

Minimum Lateral Diameter Based on Orifice Spacing for 1/4" Diameter Orifices

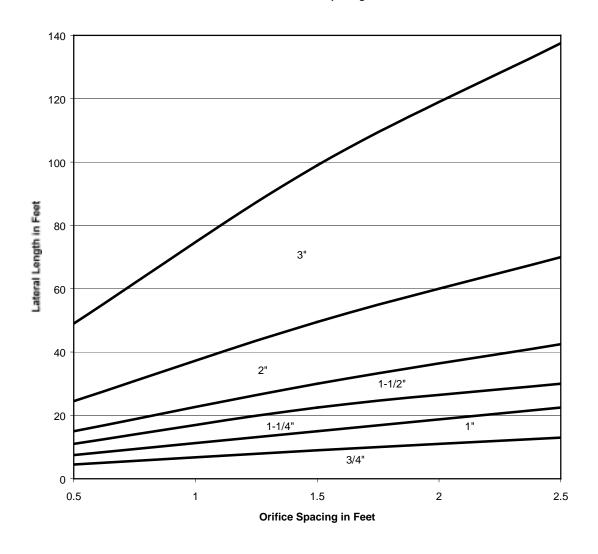

Minimum Lateral Diameter Based on Orifice Spacing for 1/4" Diameter Orifices

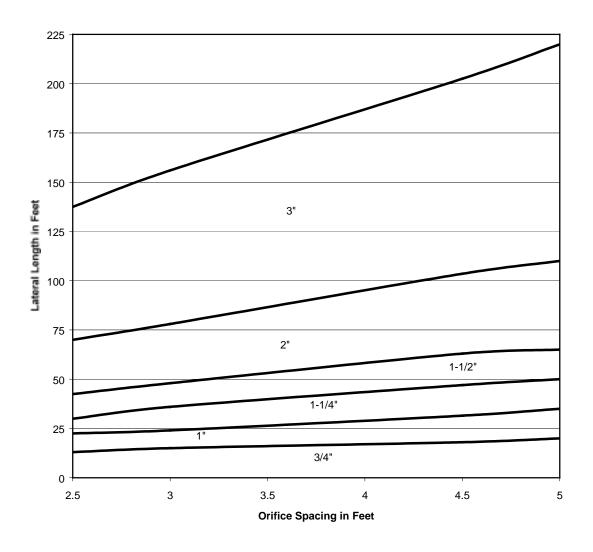


VIII. TABLES

	Discharge Rates	Table 4 in Gallons per Minute from Orifice	es ^a
Pressure in		Orifice Diameter	
feet	1/8	3/16	1/4
2.5	NP	0.66	1.17
3	NP	0.72	1.28
3.5	NP	0.78	1.38
4	NP	0.83	1.47
4.5	NP	0.88	1.56
5	0.41	0.93	1.65
5.5	0.43	0.97	1.73
6	0.45	1.02	1.80
6.5	0.47	1.06	1.88
7	0.49	1.10	1.95
7.5	0.50	1.14	2.02
8	0.52	1.17	2.08
8.5	0.54	1.21	2.15
9	0.55	1.24	2.21
9.5	0.57	1.28	2.27
10	0.58	1.31	2.33

Note a: Table is based on - Discharge in GPM = 11.79 x Orifice Diameter² in inches x (Pressure in Feet)^{1/2} NP means not permitted

						Tab	le 5						
			Maximu	ım Manifold	Length Base	ed on Indivi	dual Lateral	Flow Rates a	and Lateral	Spacing			ļ
Individual Lateral 1-1/4" Diameter Manifold Discharge Rate			1-1/2" Diameter Manifold										
End	Center			Lateral	Spacing					Lateral	Spacing		
Manifold	Manifold	1.5	2	2.5	3	3.5	4	1.5	2	2.5	3	3.5	4
10	5	4.5	6	7.5	9	10.5	8	7.5	8	10	12	14	12
20	10	3	4	5	6	7	8	4.5	6	7.5	6	7	8
30	15	3	4					3	4	5	6	7	8
40	20							3	4	5	6		
50	25							3	4				
60	30							3					
Individu	al Lateral			2" Diamete	er Manifold					3" Diamete	er Manifold		
Dischar	rge Rate												
End	Center	Lateral Spacing				Lateral Spacing							
Manifold	Manifold	1.5	2	2.5	3	3.5	4	1.5	2	2.5	3	3.5	4
10	5	12	14	15	18	21	20	22.5	28	32.5	36	38.5	44
20	10	7.5	8	10	12	14	12	15	18	20	24	24.5	28
30	15	6	6	7.5	9	10.5	12	12	14	15	18	21	20
40	20	4.5	6	7.5	6	7	8	9	12	12.5	15	17.5	16
50	25	4.5	4	5	6	7	8	7.5	10	12.5	12	14	16
60	30	3	4	5	6	7	8	7.5	8	10	12	14	12
70	35	3	4	5	6	7	8	6	8	10	9	10.5	12
80	40	3	4	5	6	7		6	8	7.5	9	10.5	12
90	45	3	4	5	6			4.5	6	7.5	9	10.5	12
100	50	3	4	5				4.5	6	7.5	9	10.5	12
110	55	3	4					4.5	6	7.5	9	10.5	8
120	60	3						4.5	6	7.5	6	7	8
130	65	3						4.5	6	5	6	7	8
140	70							4.5	6	5	6	7	8
150	75							4.5	6	5	6	7	8
160	80							4.5	4	5	6	7	8
170	85							4.5	4	5	6	7	8
180	90							3	4	5	6	7	8
190	95							3	4	5	6	7	8
200	100							3	4	5	6	7	8

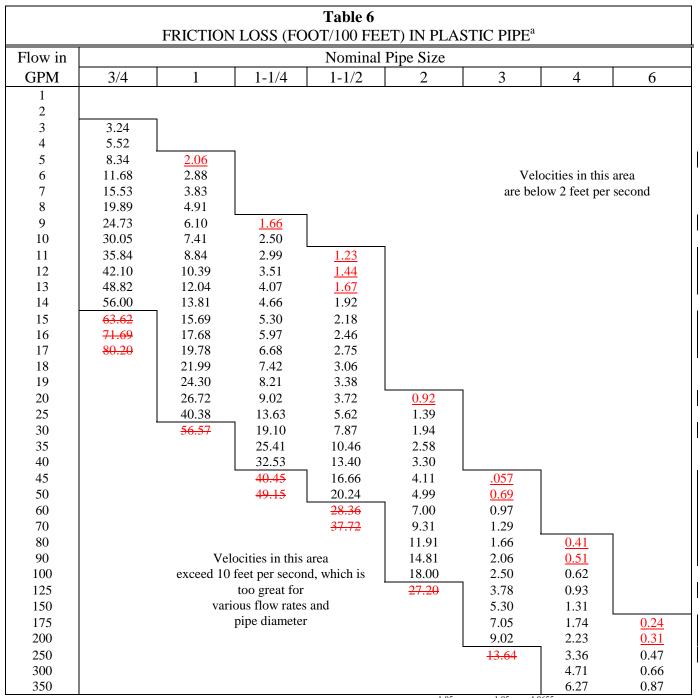

Note a: Table is based on – Hazen-Williams formula: $h = 0.002082L \times (100/C)^{1.85} \times (gpm^{1.85} \div d^{4.8655})$

Where: h = feet of headL = Length in feet

C = Friction factor from Hazen-Williams (145 for plastic pipe)

gpm = gallons per minute

d = Nominal pipe size

Table 7					
VOID VOLUME FOR VARIOUS DIAMETER PIPES					
BASED ON N	NOMINAL I.D. ^a				
Nominal Pipe Size	Gallons per Foot				
3/4	0.023				
1	0.041 0.064				
1-1/4					
1-1/2	0.092				
2	0.163				
3	0.367				
4	0.65				
6	1.469				

Note a: Table is based on - $\pi = \frac{(d/2)^2}{2} \times \frac{12}{ft} \div \frac{231}{231} \text{ cu.in./cu.ft.}$

Where: \underline{rd} = nominal pipe size in inches

VIII. RREFERENCES

Department of Industry, Labor and Human Relations 1994, "Pressure Distribution Manual" Small Scale Waste Management Project, University of Wisconsin – Madison, 1981, R.J. Otis, "Design of Pressure Distribution Networks for Septic Tank-Soil Absorption Systems."

X. PRESSURE DISTRIBUTION WORKSHEET

Information needed for Pressure Distribution Design:

Daily wastewater flow =	gal/day
Design loading rate =	gal <u>/ft²</u> /day
System Configuration:	

1		ft.	system	width
---	--	-----	--------	-------

Proposed Lateral Layout:

3.	number	of	latera	ls

Choose the Orifice Spacing:

$$n = L/x + .5$$

Where: n = number of orificesL = lateral length, in feet x =orifice spacing, in feet

Note: Networks with central manifold have laterals on each side of the manifold. Therefore the number of laterals are two times as many as a network with an end manifold.

Re-evaluate the Lateral Length:
11 ft. final lateral length (# of orifices x orifice spacing - 1/2 orifice spacing = optimal length)
Choose the Lateral Diameter:
12 in. (Graphs 1-68)
Calculate the Lateral Discharge Rate:
13 gpm lateral discharge rate. Discharge rate per orifice x # of orifices per lateral = lateral discharge rate.
Choose the Manifold Diameter:
14 in. (Table 5)
Calculate the System Discharge Rate:
15 gpm (# of laterals x lateral discharge rate)
Calculate the Force Main Friction Loss (for each segment of different diameter of between tees in the force main):
16 ft. force main length
17 in. force main diameter (Table 6)
18 gpm system discharge rate (from #15)
19 ft. friction loss in ft/100 ft. x length ÷ 100 ft. (Table 6)
Calculate the Total Dynamic Head:
20 ft. system head. (Ddistal pressure #6-x 1.3 ft.)
21. ft. network pressure compensation[losses due to fittings, etc. (0.3 x distal presure)
242 ft. vertical lift (pump off to lateral elevation)
223 ft. friction loss (in the force main in feet #19)
234 ft. Total Dynamic Head (TDH) (sum of #20 through #223)

Calculate the Dose Volume:								
24 <u>5</u> gal. based on system type.								
2 <u>56</u> gal drain back								
267 gal actual dose volume (#24 + #25)								
Pump Selection:								
278 gpm pump discharge rate at TDH (#234) (not less than system discharge rate, #15)								
Dose Chamber Sizing: (Sizing of dose chamber serving a sand filter may have different requirements. See component manual or manufacturer's or designer's specifications for sizing criteria.)								
289 in. tank bottom to "off" switch gal.								
2930 in. dose volume (from #267) gal. ("off" to "on" switch)								
3 <u>01</u> in. "on" switch to alarm switch gal.								
342 in. reserve capacity gal. (residential = 100 gal/BR)								
3 <u>23</u> in. dose chamber capacity gal.								

XI. PLAN SUBMITTAL AND INSTALLATION INSPECTION

A. Plan Submittal

In order to install a system correctly, it is important to develop plans that will be used to install the system correctly the first time. The following checklist may be used when preparing plans for review. The checklist is intended to be a **general guide**. Not all needed information may be included in the list. Some of the information may not be required to be submitted due to the design of the system. Conformance to the list is not a guarantee of plan approval. Additional information may be needed or requested to address unusual or unique characteristics of a particular project. Contact the reviewing agent for specific plan submittal requirements, which the agency may require that are different than the list included in this manual.

General Submittal Information

- Photocopies of soil reports forms, plans, and other documents are acceptable. However, an original signature is required on certain documents.
- Submittal of additional information requested during plan review or and questions concerning a specific plan must be referenced to the Plan Identification indicator assigned to that plan by the reviewing agency.
- Plans or documents must be permanent copies or originals.

Forms and Fees

—Application form for submittal, provided by reviewing agency along with proper fees set by reviewing agent.

Soils Information

- Complete Soils and Site Evaluation Report (form # SBD-8330) for each backhoe pit described; signed and dated by a certified soil tester, with license number.
- Separate sheet showing the location of all borings. The location of all borings and backhoe pits must be able to be identified on the plot plan.

Documentation

- Architects, engineers or designers must sign, seal and date each page of the submittal or provide an index page, which is signed, sealed and dated.
- Master Plumbers must sign, date and include their license number on each page of the submittal
 or provide an index page, which is signed, sealed and dated.
- Three completed sets of plans and specifications (clear, permanent and legible); submittals must be on paper measuring at least 8-1/2 by 11 inches.
- Designs that are based on department approved component manual(s) must include reference to the manual(s) by name, publication numbers and published date.

Plot Plan

- Dimensioned plans or plans drawn to scale (scale indicated on plans) with parcel size or all property boundaries clearly marked.
- Slope directions and percent in system area.
- Benchmark and north arrow.
- Setbacks indicated as per appropriate code.
- Two-foot contours to 25ft. on all sides of system area or other appropriate contour interval within the system area. include elevations at all four corners of proposed system.
- Location information; legal description of parcel must be noted.
- Location of any nearby existing system or well.

Plan View

- Dimensions for distribution cell(s).
- Location of observation pipes.
- Dimensions of dispersal/treatment component. for fill for mound.
- Pipe lateral layout, which must include the number of laterals, pipe material, diameter and length; and number, location and size of orifices.
- Manifold/force main locations, with materials, length and diameter of each.

Cross Section Of System

- Include tilling requirement, <u>distribution cell details</u>, <u>depth and size of aggregate</u>, percent slope, side slope, and cover material.
- Lateral elevation, position of observation pipes, dimensions and depths of <u>distribution cell</u>, <u>aggregate</u>, and type of cover material such as geotextile fabric, <u>and depth</u>, if applicable.

System Sizing

- For one- and two-family dwellings, the number of bedrooms must be included.
- For public buildings, the sizing calculations must be included.

Tank And Pump / Siphon Information

- All construction details for site-constructed tanks.
- Size and manufacturer information for prefabricated tanks.
- Notation of pump or siphon model, pump performance curve, friction loss for force main and calculation for total dynamic head.
- Cross section of <u>dose</u> tank / chamber to include storage volumes; connections for piping, vents, and <u>power; electricity;</u> pump "off" setting; dosing cycle and volume; <u>high water alarm setting</u>, and storage volume above highwater alarm; and location of vent and manhole.
- Cross section of two compartments tanks or tanks installed in a series must include information listed above.

B. Inspections.

Inspection shall be made in accordance with ch. 145.20, Wis. Stats and s. Comm 83.26, Wis. Adm. Code. The inspection form on the following two pages may be used. The inspection of the system installation and/or plans is to verify that the system at least conforms to specifications listed in Tables 1 - 3 of this manual.

POWTS INSPECTION REPORT

(ATTACH TO PERMIT)

GENERAL INFORMATION

Permit Holder's Name			City Village Town of					f		Count	y	San	Sanitary Permit No.		
State Plan ID No.				Tax Parcel No.					Property Address if Available						
TANK INFORMATION									SETBACKS						
TYPE MANUFAC							P/1	L	₩E		BLDG.	TO	AIR AKE	ROAD	
SEPTIC															
DOSING															
AERATION															
HOLDING															
				PUM	P/	SIPHON I	NFORM	AAT	ION						
Manufacturer:			A	Iodel No).			Ē	emano	l in GP	M	Vert.	Lift		
FO	RCE M	AIN INFO	RM/	TION				•		FRIC	TION LC	SS			
Length		Diameter				Well	Compo	nent l	Head	TDI	I As Bui				
	II.			SOIL	ABS	SORPTIO	N COM	PON	ENT			l l			
TYPE OF COM	PONEN	Ŧ					COVER			L					
Cell Width				Cell Diameter Cell D			pth Horizontal Liqui Separation				Liquid E	Depth No. of Cells			
LEACHING C	II A MD	ED OD IN	TT.	M C						M . 1 .	1 NT.				
SETBACK INFO								Τ,	Well	Mode	I No.	Lake/Stream			
SEI BACK INFO	J.	Property		TONC			/ T1			1. o o 1. o d	C C	Lake/	Stream	1	
Header /	Manifo		RIBUTION COMPONENT Distribution Pip								pacing	Obsv. Tubes Inst. & No.			
Length	Dia.		Length Dia.			Spacing					m	st. & 110.			
Length	Dia.		Leng	,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,	1	SOIL CO	_								
Depth over center	er of		er edge of Depth of Co			epth of Cov				led	d Mulched				
cell:		cell:	material				4 DDD (•					
DEVIATIONS FROM APPROVED PLAN															
DATE OF INST	. DIREC	CTIVE:					DATE ()FE	NFOR(CEME	VT ORDE	R:			
DATE OF REFE	RRAL	TO LEGA	L CO	UNSEL:		<u> </u>									
COMMENTS (Persons present, discrepancies, etc.)															
COMPONENTS NOT INSPECTED															
Plan Revision Re		Date:		Signature of Inspecto								(Cert. Number		
				•	C1	zetch on	othor o	ida							

Sketch on other side

POWTS INSPECTION REPORT (ATTACH TO PERMIT) GENERAL INFORMATION

Permit Hold	City_	City Village Town of					County				Sanitary Permit No.			
State Plan	ı ID No.		Tax Parcel No.					Property Address if Ava						
TREATME	NT COMPON	ENT INFORM	INFORMATION					SETBACKS (FT)						
TYPE	MANUFACTURER AND MODEL NUMBER			<u>CAPACITY</u> <u>P</u>		WELL					LDG. VENT			
<u>SEPTIC</u>														
<u>DOSING</u>														
<u>AERATION</u>														
<u>HOLDING</u>														
FILTER PUMP / SIPHON INFORMATION														
N. C			IP/	SIPHON IN			_		TOT	NTT .	<u> </u>			
Manufacturer:	AAINI INIEOD	Model No.			<u>Dema</u>	nd in C		NI T C			<u>Design</u>			
	MAIN INFOR		11					N LC	OSS (FT)	•	TD)	DII A		
Length	<u>Diameter</u>	Dist. To W	To Well Component		Head	Force Main Losses			Vert. Lift		TDH - As Built			
		SOIL	ΔR	SORPTION	COMP	ONEN	T							
TYPE OF COMPO	ONENT:	SOIL			OVER N									
Cell Width	Cell Length	Cell Dept	h	Cell Space		No. of								
			_											
LEACHING CHA	MBER OR UN	T Manufacturer					Model No.							
SETBACK INFO.	y Line <u>Bldg.</u> <u>Well</u>					Water Line OHWM					<u>VM</u>			
DISTRIBUTION COMPONENT														
	r :0.11			tion data on b		<u>orm</u>	0 :0	1	0 :0		01	D'		
<u>Header / M</u>	<u>lanifold</u>	<u>Di</u>	<u>Distribution Lateral(s)</u>				Orifice Or size Spa					os. Pipes		
Length	Dia.	Length		Dia.	Spacing		SIZE	<u>2</u>	<u>Spaci</u>	ng	1118	81. & NO.		
Lengur	<u>Dia.</u>	Lengur		SOIL COV										
Depth over center	of Denth o	ver edge of	Den	th of Cover		ture	See	ded /	Sodded	1	Mulche	d		
cell:	cell:		mate		102	<u>rture</u>	500	aca /	<u>Boacea</u>	Withered				
		<u>DEVIAT</u>	TION	NS FROM A	<u>PPROV</u>	VED P	<u>LAN</u>							
DATE OF INST.	DIRECTIVE:			D	ATE OF	FENFO	ORCEM	1ENT	ORDER	<u></u>				
DATE OF REFER		AL COUNSEL	<u>.:</u>			\								
COMMENTS (Persons present, discrepancies, etc.)														
COMPONENTS NOT INSPECTED														
Plan Revision Req	uired Dat	<u>e:</u> <u>Si</u>	gnat	ure of Inspec	tor:					9	Cert. Nu	<u>ımber</u>		

Sketch on other side

ELEVATION DATA

Point	Back	Height of	Foresight	Elevation	Comments
	sight	instrument			
Bench mark					
Bldg. sewer					
Tank inlet					
Tank outlet					
Tank inlet					
Tank outlet					
Dose tank					
inlet					
Bottom of					
dose tank					
Dist. lateral 1					
System elev. 1					
Dist. lateral 2					
System elev. 2					
Dist. lateral 3					
System elev. 3					
Grade elev. 1					
Grade elev. 2					
Grade elev. 3					

SKETCH OF COMPONENT & ADDITIONAL COMMENTS